

WARRANTY

Loewenstein products are guaranteed to be free from defects in design, material, and workmanship, given normal use and proper care, for 5 years of single-shift service from date of purchase as shown on your original receipt or other proof of purchase with the exceptions noted below. Loewenstein will repair or replace, at our discretion without charge to the original purchaser, any product or part thereof which fails as the result of such a defect during the warranty period. Freight or other shipping charges on returned product or part must be prepaid by the purchaser. Labor and service not covered under warranty. Loewenstein assumes no responsibility for repairs to products that result from user modifications, attachments to a product, misuse, abuse, alteration, or negligent use. Except as stated above, Loewenstein makes no expressed or implied warranties as to any product, and, in particular, makes no warranty of merchantability or of fitness for any particular purpose. Loewenstein shall not be liable for consequential or incidental damages arising from any product defect.

Foam padding — 2 years

This warranty does not cover:

- Damage caused by a transportation company.
- Natural variations in color, grain, or texture of wood and other covering materials over which Loewenstein has no control.
- Freight or other shipping charges on returned product or parts, labor and service.



LOEWENSTEIN

an OFS Brands™ company
800.327.2548 | fax 812.683.7256
1204 E 6th St., Huntingburg, IN 47542
www.loewensteininc.com

WORLD CLASS DESIGN





WOOD CARE

Careful craftsmanship combined with our Euroluxe with SilverBan finish makes your new Loewenstein wood furniture incredibly durable, and with proper care your office furniture will provide beauty and convenience for years. To learn more about our Euroluxe with SilverBan finish, visit www.ofsbrands.com/environment. All Loewenstein products undergo rigid color-match procedures to ensure the best in color consistency.

- Dust frequently using a soft, damp, clean cloth, wiping with the grain.
- Remove liquid spills immediately, using a blotting, rather than wiping, motion.
- To clean, use a glass cleaner formulated with ammonia. Apply a small amount to a soft dry cloth and wipe in the direction of the grain. Dry with a soft cloth. Do not use furniture polish containing oil or silicone.
- Avoid prolonged exposure to direct sunlight, high humidity, extreme heat or cold, and moisture.
- To prevent desktop damage, all desk accessories should have felt or soft fiber backing (no vinyl, plastic, or wood).

euroluxe™
with SILVERBAN™



SEATING CARE

- Dust exposed wood parts frequently using a soft, damp, clean cloth, wiping with the grain.
- To clean wood, use a glass cleaner formulated with ammonia. Apply a small amount to a soft dry cloth and wipe in the direction of the grain. Dry with a soft cloth. Do not use furniture polish containing oil or silicone.
- To clean leather and vinyl upholstery, use a warm, damp cloth to restore a bright finish. For stubborn stains, use a moisturizing soap. Remove lather with a damp cloth, but do not rinse. Buff with a dry cloth.
- For fabric upholstery, use a damp cloth to wipe up spills. For tougher stains, contact your local Loewenstein dealer for cleaning instructions.
- Avoid prolonged exposure to direct sunlight, high humidity, extreme heat or cold, and moisture.

